



MAIN KEYS

Stop	Rear/Soft	Front	Pressure	Position	User 1/2
Stops the WASHLET operation	Activates rear cleansing / with low pressure	Activates bidet cleansing	Adjusts the water pressure to one of five levels	Adjusts the position of the nozzle to one of five positions	Stores the user preferred settings and helps to reuse them easily

SUB KEYS

III Flush II	Oscillate	Pulsate	Dryer	Seat/Lid
Activates the full-capacity (III) or the water-saving (II) Tornado Flush	Moves the nozzle back and forth for thorough cleansing	Causes pulses of varying water pressure	Activates a gentle stream of warm air	Raises and closes seat and lid