



Model	A1	A2	X1	X2	Y1	Y2	B1	B2	C1	C2	D	H
PDD 80Lx80R	800	800	788-798	788-798	769-779	769-779	406	406	191-201	191-201	793	1950
PDD 80Lx90R	800	900	788-798	888-898	769-779	869-879	406	406	191-201	291-301	793	1950
PDD 80Lx100R	800	1000	788-798	988-998	769-779	969-979	406	406	191-201	391-401	793	1950
PDD 90Lx80R	900	800	888-898	788-798	869-879	769-779	406	406	291-301	191-201	793	1950
PDD 90Lx90R	900	900	888-898	888-898	869-879	869-879	406	406	291-301	291-301	793	1950
PDD 90Lx100R	900	1000	888-898	988-998	869-879	969-979	406	406	291-301	391-401	793	1950
PDD 100Lx80R	1000	800	988-998	788-798	969-979	769-779	406	406	391-401	191-201	793	1950
PDD 100Lx90R	1000	900	988-998	888-898	969-979	869-879	406	406	391-401	291-301	793	1950
PDD 100Lx100R	1000	1000	988-998	988-998	969-979	969-979	406	406	391-401	391-401	793	1950

