

HAPPY HOUR 07:15 - 11:15

440x440
500x380

Lavabi ad incasso. Installazione sotto il piano del mobile. Senza troppopieno.

Countertop washbasins. To be installed under the vanity units. Without overflow.

Einbauwaschtisch. Montage unterm Möbelstück. Ohne Überlauf.

Vasques à encastrer sous plan de toilette. Sans trop-plein.

Lavabos de encastre. Para instalar bajo encimera del mueble. Sin rebosadero.

Встроенный умывальник. Установка под мебельную столешницу; без перелива.



YXSP




YXSQ

INSTALLAZIONE INSTALLATION

incasso sottopiano
built under



esempi di montaggio
mounting examples

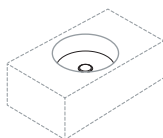

ACCESSORI ACCESSORIES



YXST
fissaggio sottopiano
undercounter special fixing




YXMY
sifone di scarico
drain trap





YXMN (BI-White)
YXMP (CR-Chrome)
piletta a scarico libero
free outlet drain siphon

DISEGNO TECNICO TECHNICAL DESIGN

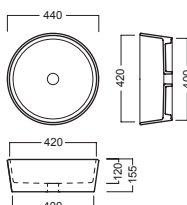

Apertura per installazione su piano
Hole for surface installation

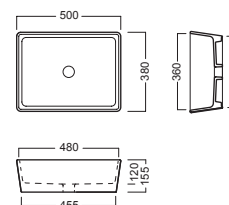

Apertura per installazione su piano
Hole for surface installation

