




Exquisite Collection
Wall-Mounted Bath Shower Mixer

Model: KEF-16055


Exquisite Collection

Wall-Mounted Bath Shower Mixer

Model: KEF-16055

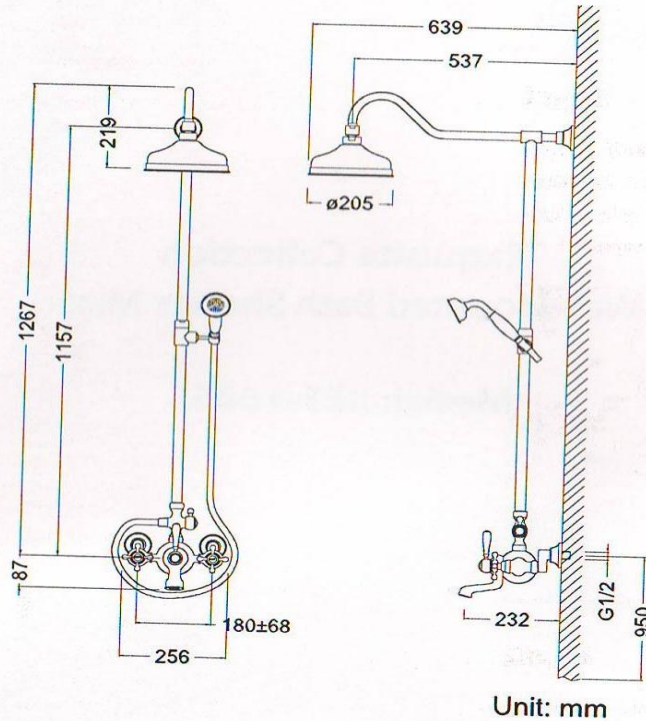


Unit: mm

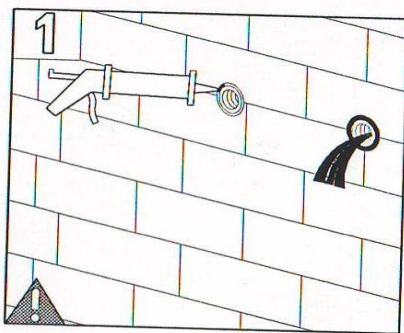


Step 1

Fill the gap between the wall and the outlet with silicone. Turn on the valve and allow the water to run freely for 5 minutes. Then turn off the valve.

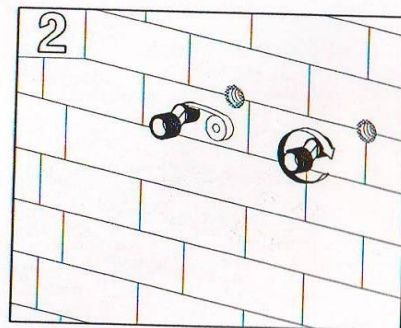


Step 2

Wrap the bended connector with Teflon tapes. Then screw it into the outlet hole.

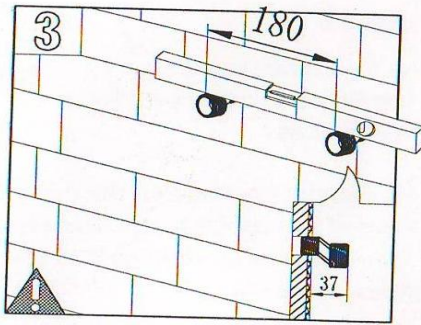


Step 3

Adjust the position of the two bended connectors to be horizontal, and make sure the center distance to be 180mm.

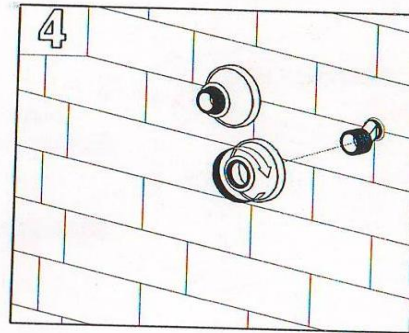


Step 4

Install the flange to the bended connector.

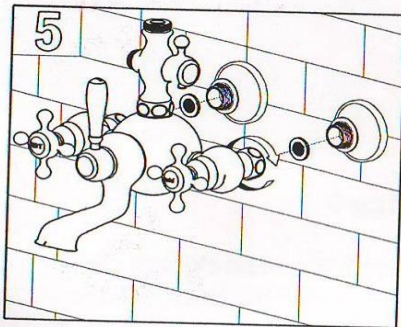


Step 5

Put the washer into the fixing nut. Lock the fixing nut onto the bended connector to tight the mixer body.

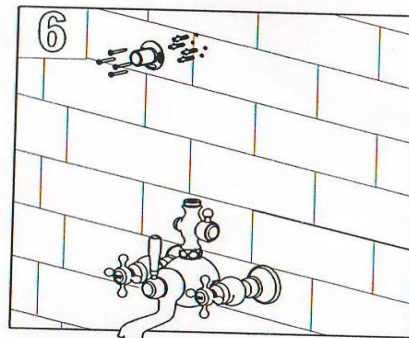


Step 6

Assemble the straight pipe, fixing plate onto the mixer body, mark the position of the fixing plate (please use a level to make the straight pipe be vertical) and then remove the straight pipe and fixing plate. Drill 4xØ6 holes at the marked position. Then knock the plastic nails in, and install the fixing plate.

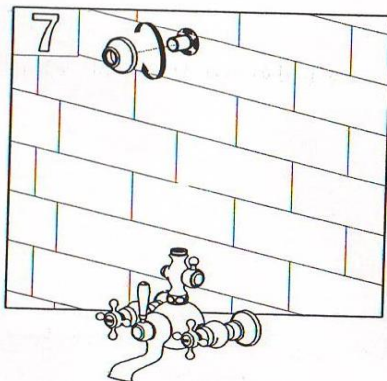

Step 7

Install the flange to the fixing plate.

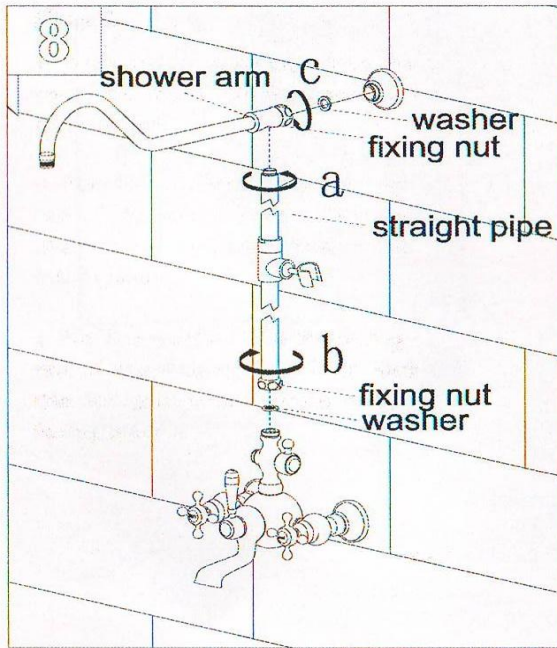


Step 8

a. Twist the straight pipe into the corresponding screw thread of the shower arm.

b. Put the washer into the fixing nut of the straight pipe. Then lock the nut tightly connected to the mixer body.

c. Put the washer into the fixing nut of the shower arm. Then lock the nut tightly connected to the fixing plate

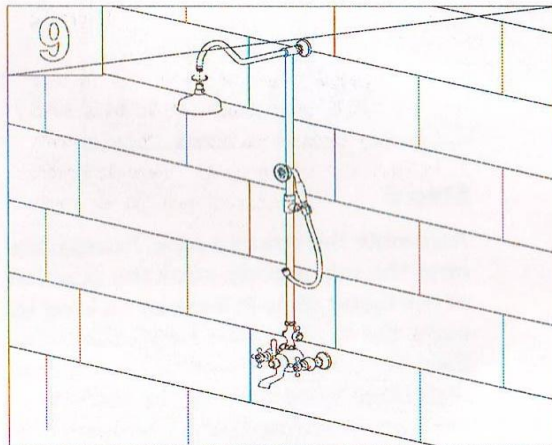

Step 9

Install the head shower. Screw one end of the hose into the mixer body, another end to the hand shower, then place the hand shower on the bracket.

Help Line

If you need additional assistance at any time during the installation, please call us at: **1.800.775.0703** or email us at: **info@kraususa.com**

Our customer service hours are **Monday - Friday, 9am - 6pm EST.**
Be sure to visit our website at: **www.kraususa.com**



**KrausUSA / 12 Harbor Park Dr,
Port Washington, NY, 11050**

**Questions?
Call Us: 1.800.775.0703**